

AMETEK Part Number	Customer Part Number	Description	Service Center	Cage Code
182936	10-60735-1	OXYGEN PRESSURE INDICATOR	BSC	3VJA2
182972	10-60735-2	OXYGEN PRESSURE INDICATOR	BSC	3VJA2
12/15/2400	10-60735-2	OXYGEN PRESSURE INDICATOR	BSC	3VJA2
253884	10-60775-6	SURFACE POSITION INDICATOR	BSC	3VJA2
522782	10-62067-1	VIRATION MONITOR INDICATOR	BSC	3VJA2
10100N01Y00	S271U121-6	HYDRAULIC QUANTITY INDICATOR	BSC	3VJA2
10100N02Y00	S271U121-6	HYDRAULIC QUANTITY INDICATOR	BSC	3VJA2
10100N03Y00	S271U121-6	HYDRAULIC QUANTITY INDICATOR	BSC	3VJA2
10166N01N00	10-62035-2	RUDDER TRIM INDICATOR	BSC	3VJA2
10486N01Y00	S417T600-7	POTABLE WATER QTY INDICATOR	BSC	3VJA2
8DJ179KBE3	8DJ179KBE3	TEMPERATURE INDICATOR	BSC	3VJA2
8KE143GAA1	S332W401-100	SIGNAL CONDITIONER UNIT	BSC	3VJA2
8KE143GAB1	S332W401-101	AIRCRAFT VIBRATION MONITOR	BSC	3VJA2
8KE143GAD1	S332W401-200	AIRCRAFT VIBRATION MONITOR	BSC	3VJA2
8KE143PAA1	S332W401-400	SIGNAL CONDITIONER UNIT	BSC	3VJA2
8KE143PAB1	S332W401-401	AIRCRAFT VIBRATION MONITOR	BSC	3VJA2
8KE143PAC1	S332W401-402	AIRCRAFT VIBRATION MONITOR	BSC	3VJA2
8KE143RAA1	S332W401-700	SIGNAL CONDITIONER UNIT	BSC	3VJA2
8KE143RAB1	S332W401-701	AIRCRAFT VIBRATION MONITOR	BSC	3VJA2
8KE143RAC1	S332W401-702	AIRCRAFT VIBRATION MONITOR	BSC	3VJA2
8KE144AAB1	S332W401-1001	AVM REMOTE CHARGE CONVERTER	BSC	3VJA2
8TJ88GAP1	10-60507-10	FUEL FLOW POWER SUPPLY	BSC	3VJA2
8TJ88GAP4	10-60507-10	FUEL FLOW POWER SUPPLY	BSC	3VJA2
AW2835AB05	10-60726-5	CABIN ALTIMETER DIFF PRESS IND	BSC	3VJA2
AW2835AB06	10-60726-6	CABIN ALTIMETER DIFF PRESS IND	BSC	3VJA2
AW2835AB07	10-60726-7	CABIN ALTIMETER DIFF PRESS IND	BSC	3VJA2
C-5C	99-4163-9-9002	MAGNETIC STANDBY COMPASS	BSC	3VJA2
C-5H	99-3423-9-9001	MAGNETIC STANDBY COMPASS	BSC	3VJA2
C-5L	CB2125-5LW	MAGNETIC STANDBY COMPASS	BSC	3VJA2
C-5M	PGA0117W	MAGNETIC STANDBY COMPASS	BSC	3VJA2
HSL-OC12B	03-2241-9-0001	RUDDER TRIM INDICATOR	BSC	3VJA2

AMETEK Part Number	Customer Part Number	Description	Service Center	Cage Code
SEDL-OC9C	S231T245-4	DUAL DUCT PRESSURE INDICATOR	BSC	3VJA2
SEL-OC19D	10-61890-4	EGT INDICATOR	BSC	3VJA2
SEL-OC19E	10-61890-1	EGT INDICATOR	BSC	3VJA2
SEL-OC19G	10-61890-6	EGT INDICATOR	BSC	3VJA2
SEL-OC4AD	24-7931-9-0001	OIL PRESSURE INDICATOR	BSC	3VJA2
SEL-OC4W	03-7931-9-0001	OIL PRESSURE INDICATOR	BSC	3VJA2
SRDL-6D	6685-01-095-1089	DUAL PRESSURE INDICATOR	BSC	3VJA2
SRDL-7G	10-3223-34	DUAL BRAKE PRESSURE INDICATOR	BSC	3VJA2
SRDL-7H	10-3223-33	DUAL SYSTEM PRESSURE INDICATOR	BSC	3VJA2
SRDL-OC7E	10-3223-43	PRESSURE RATIO INDICATOR	BSC	3VJA2
SRL-O4L	99-7931-9-9002	OIL PRESSURE INDICATOR	BSC	3VJA2
SRL-O4L-M1	SRL-O4L-M1	OIL PRESSURE INDICATOR	BSC	3VJA2
SRL-OC4N	99-7931-9-9002	OIL PRESSURE INDICATOR	BSC	3VJA2
ST-104Z	99-7936-9-9002	PRESSURE TRANSMITTER	BSC	3VJA2
ST-104Z-M1	6685-00-951-8491	OIL PRESSURE INDICATOR	BSC	3VJA2
ST-106AB	6685-00-951-8492	PRESSURE TRANSMITTER	BSC	3VJA2
ST-107R	10-3223-32	HYDRAULIC PRESSURE TRANSMITTER	BSC	3VJA2
ST-107R-M1	ST-107R-M1	HYDRAULIC PRESSURE TRANSMITTER	BSC	3VJA2