

AMETEK Part Number	Customer Part Number	Description	Service Center	Cage Code
522458	DH8SC0070	DUAL HYDRAULIC PRESS INDICATOR	BSC	3VJA2
522484	8SC0152	RUDDER TRIM INDICATOR	BSC	3VJA2
522778	8SC0073	DC POWER MONITOR	BSC	3VJA2
522808	8SC0072	AC POWER MONITOR	BSC	3VJA2
522848	5427-361-80-10	ENG OIL TEMP/PRESSURE INDICATOR	BSC	3VJA2
522849	8SC0160	DUAL LOW PRESS ROTOR INDICATOR	BSC	3VJA2
522942	8SC0065	FLAP DEGREES INDICATOR	BSC	3VJA2
522945	8SC0271	FUEL TANK TEMPERATURE INDICATOR	BSC	3VJA2
523115	8SC-0152	RUDDER TRIM INDICATOR	BSC	3VJA2
523188	4428-150-80-11	FLAP POSITION INDICATOR	BSC	3VJA2
523244	DH8SC0249	DUAL FUEL TEMP INDICATOR	BSC	3VJA2
523281	5427-361-80-10	OIL TEMP/PRESSURE INDICATOR	BSC	3VJA2
10167N01W00	8SC-0053	TORQUE INDICATOR	BSC	3VJA2
10167N02W00	8SC-0359	TORQUE INDICATOR	BSC	3VJA2
10168N01T00	8SC-0055	ITT INDICATOR	BSC	3VJA2
10169N01R00	N827-8053	PROP RPM INDICATOR	BSC	3VJA2
10169N02R00	N827-8084	PROP RPM INDICATOR	BSC	3VJA2
10169N03R00	8SC0054	PROP RPM INDICATOR	BSC	3VJA2
10170N01R00	N617-8026	NH % RPM INDICATOR	BSC	3VJA2
10170N02R00	N917-8027	NH % RPM INDICATOR	BSC	3VJA2
10171N01F01	8SC-0057	FUEL FLOW INDICATOR	BSC	3VJA2
10171N03F02	8SC-0057	FUEL FLOW INDICATOR	BSC	3VJA2
10171N03F03	N647-8016	FUEL FLOW INDICATOR	BSC	3VJA2
10171N04F03	8SC0057	FUEL FLOW INDICATOR	BSC	3VJA2
10174N02W01	10174N02W01	TORQUE INDICATOR	BSC	3VJA2
10174N04W02	N937-8043	TORQUE INDICATOR	BSC	3VJA2
10174N06W03	N937-8000	TORQUE INDICATOR	BSC	3VJA2
10174N07W04	N937-8042	TORQUE INDICATOR W/BUG	BSC	3VJA2
10174N10W03	N757-8022	ENGINE TORQUE INDICATOR	BSC	3VJA2
10175N01T00	N937-8001	ITT INDICATOR	BSC	3VJA2
10176N02R00	N917-8007	NL % RPM INDICATOR	BSC	3VJA2
10177N01R00	N917-8008	HIGH SPEED ROTOR NH INDICATOR	BSC	3VJA2
10177N02R00	N917-8028	HIGH SPEED ROTOR NH INDICATOR	BSC	3VJA2
10874P01Y00	10874P01Y00	REFUEL PANEL	BSC	3VJA2
10874P02Y00	10874P02Y00	REFUEL PANEL	BSC	3VJA2
10875N01Y00	10875N01Y00	FUEL QUANTITY INDICATOR	BSC	3VJA2
10875N02Y00	10875N02Y00	FUEL QUANTITY INDICATOR	BSC	3VJA2
10901B01M01	10901B01M01	ENGINE INTERFACE UNIT	BSC	3VJA2
10901B02M01	10901B02M01	ENGINE INTERFACE UNIT	BSC	3VJA2
522487-1	8SC0132	BATTERY MONITOR INDICATOR	BSC	3VJA2
C-5C	99-4163-9-9002	MAGNETIC STANDBY COMPASS	BSC	3VJA2
C-5L-1	N/A	MAGNETIC STANDBY COMPASS	BSC	3VJA2
PT-O109A	N541-8208	DE ICING TRANSDUCER	BSC	3VJA2
SEDL-OC2P	8SC-0053	TORQUE PRESSURE INDICATOR	BSC	3VJA2
SEDL-OC2S	8SC-0359	TORQUE PRESSURE INDICATOR	BSC	3VJA2
SEDL-OC2S-1	SEDL-OC2S-1	TORQUE PRESSURE INDICATOR	BSC	3VJA2
SEL-OC19DW	8SC0055	INTERTURBINE TEMPERATURE INDICATOR	BSC	3VJA2
SEL-OC19EK	8SC-0325	INTERTURBINE TEMPERATURE INDICATOR	BSC	3VJA2
SEL-OC29DA	8SC0056	NH % RPM INDICATOR	BSC	3VJA2
SEL-OC29DF	8SC0054	PROP RPM INDICATOR	BSC	3VJA2
SEL-OC29DJ	8SC-0327	NL% RPM INDICATOR	BSC	3VJA2
SEL-OC29DK	8SC-0323	NH % RPM INDICATOR	BSC	3VJA2
SEL-OC2N	8SC-0053	TORQUE INDICATOR	BSC	3VJA2
SEL-OC8G	8SC-0057	FUEL FLOW INDICATOR	BSC	3VJA2
SEL-OC8J	8SC-0057	FUEL FLOW INDICATOR	BSC	3VJA2
SETL-OC420F	N827-8025	CABIN PRESSURE INDICATOR	BSC	3VJA2
SRDL-OC12F	8SC-0068	DUAL HYDRUALIC QUANTITY INDICATOR	BSC	3VJA2